



- NOTE 1: Wiring harness to Navaid servo is reused. Wire #s from the original wing leveler installation are retained.
- NOTE 2: Remove WL5 & WL6 from relay and splice together.
- NOTE 3: Shield is grounded to pin 4 at servo connector, and pin 24 at control head.
- NOTE 4: GNS 430 RS 232 OUT 3 also connected to cockpit jack tip, and USB to Serial Adapter pin 2,

TITLE DWG 4.6 Trio Autopilot Control Head		
FILE: DWG_4.6_AFCS.sch	REVISION: Draft 11 – 06 Nov 2010	
PAGE 1 OF 1	DRAWN BY: Kevin Horton	